Setup

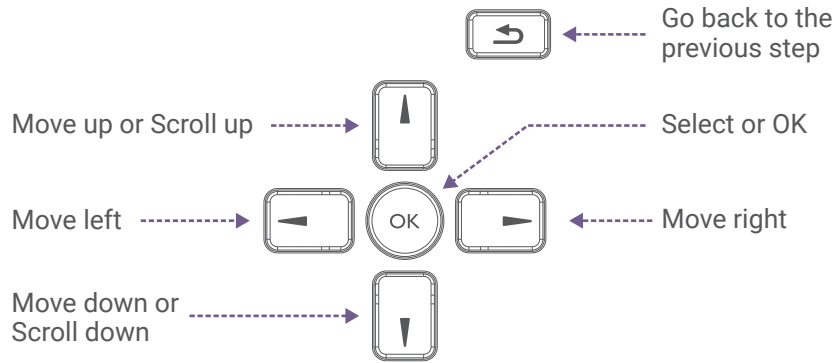### 🔆 Tip

BenQ recommends using a mouse for faster setup. If you are using the remote control, use the following buttons:

- Go back to the previous step
- Move up or Scroll up
- Select or OK
- Move left
- Move right
- Move down or Scroll down

1. Power on your BenQ signage.

2. On the **Hi there** page, select a language, and then press **Start**.

   🔆 **Tip**: Your selection on this screen is not highlighted. Press ▲ or ▼ twice to select either the language or **Start**.

3. On the **Connect to Wi-Fi** page, press **Set up offline** then **Continue**.

4. On the **Date & time** page, set the date and time, and then press **Next**.

5. On the **Copy apps & data** page, press **Don't copy** then **Skip**.

6. On the **Google services** page, review the permissions, and then press **Accept**.

7. On the **Set a PIN** page, press **Skip** then **Skip anyway**.

8. On the **End-User License Agreement (EULA)** page, read and accept the agreement, and then press **Next**.

9. On the **Privacy Policy** page, read and agree to the terms, and then press **Next**.

10. On the **BenQ services** page, toggle on **Enable BenQ services**, and then press **Next**.

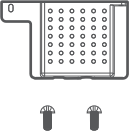Scan the QR code to access the setup instructions in other languages:

Package contents

Digital signage

Remote control

Wi-Fi slot cover
Screws × 2

Signage documents

Power cord*

HDMI cable

RS-232 cable

*The power cord type is dependent on your region.

Support

https://support.benq.com

Online manual

Contact sales form

How-to video
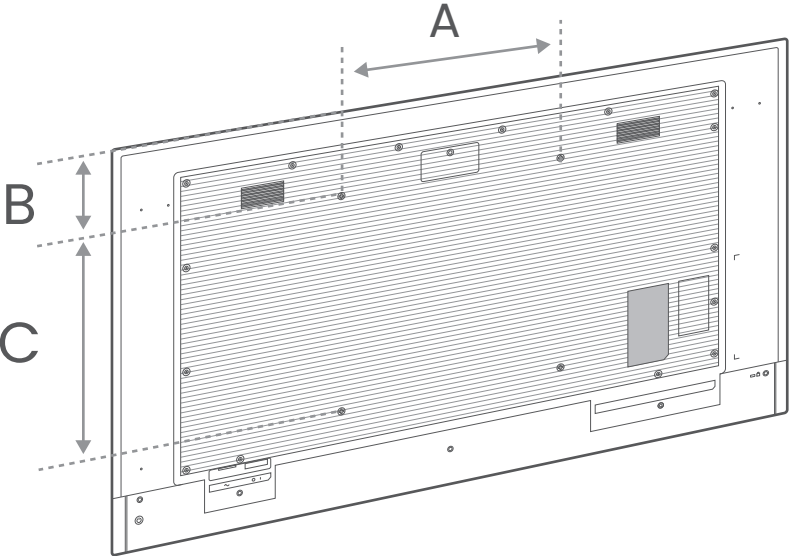
90101-39391

ecoFACTS
csr.BenQ.com

BenQ

Digital Signage
Quick Start Guide

Digital Signage
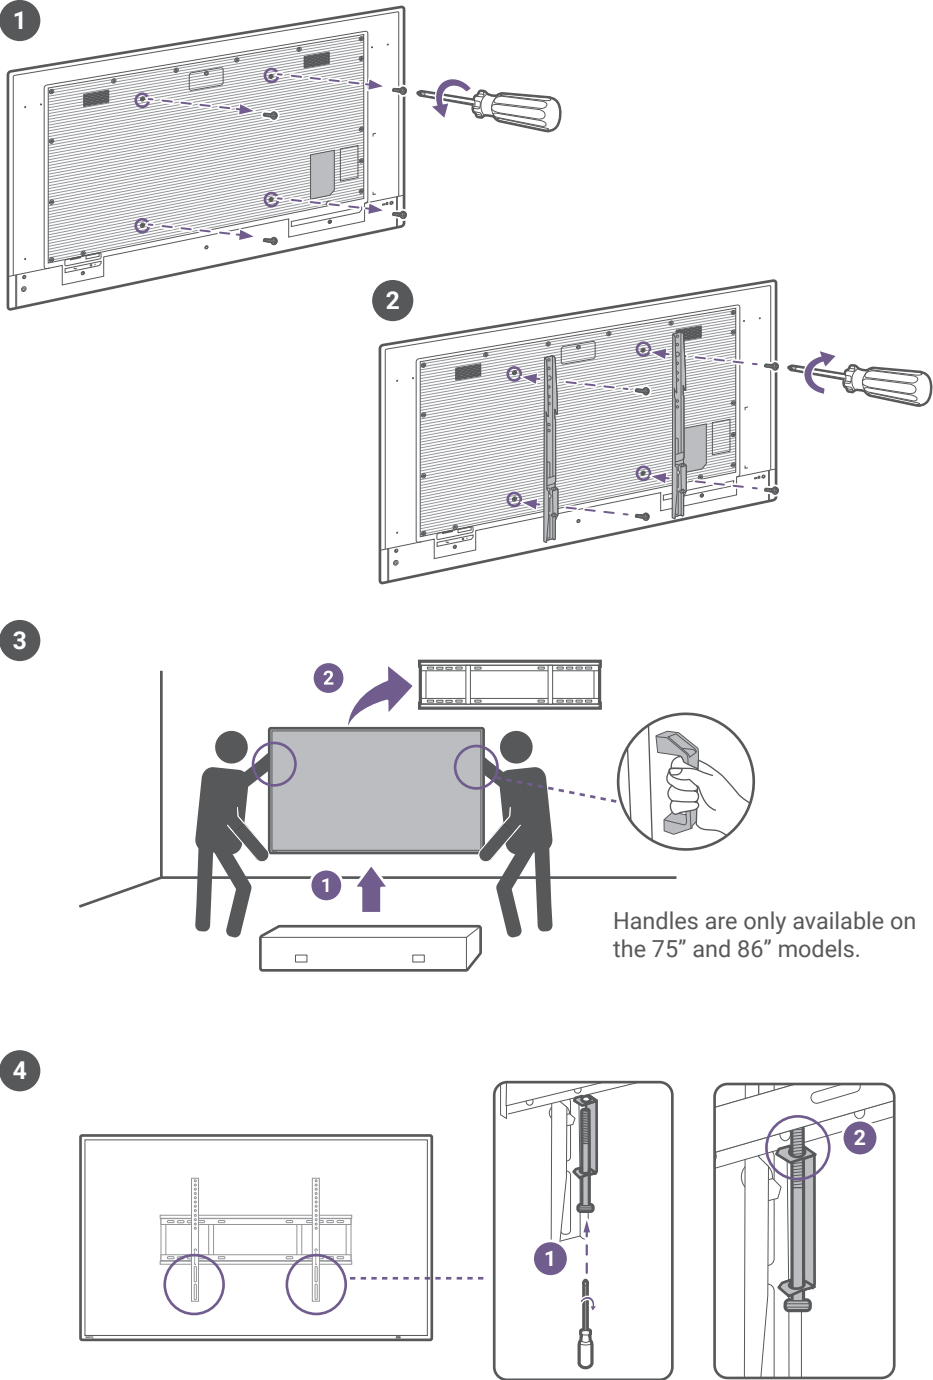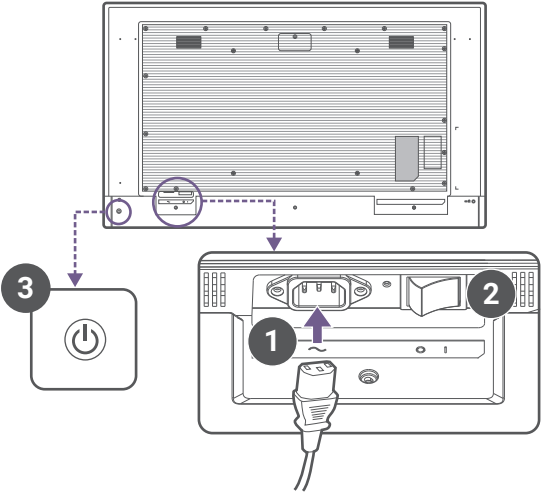SL4304, SL5504, SL6504, SL7504, SL8604, SH5504, SH6504, SH7504

Mounting

	43″	55″	65″	75″	86″
A	200 mm	400 mm	400 mm	600 mm	600 mm
B	188.7 mm	154 mm	230.4 mm	279 mm	352 mm
C	200 mm	400 mm	400 mm	400 mm	600 mm
Screw size	M6 × 12L			M8 × 16L	

The wall mount is not included and must be purchased separately.

Handles are only available on the 75″ and 86″ models.
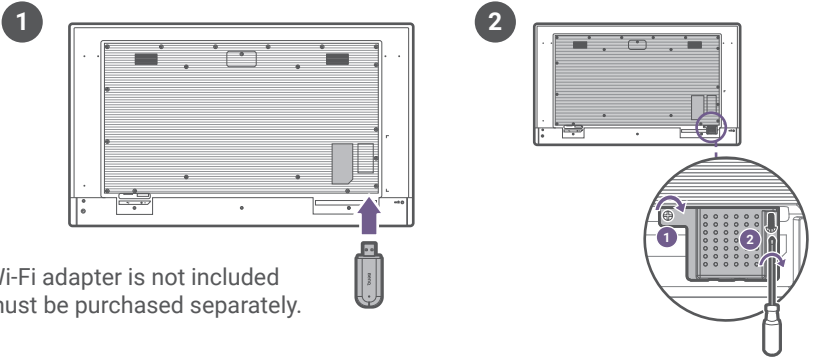
Power

Remote control

Max. 4 m

60°

30°
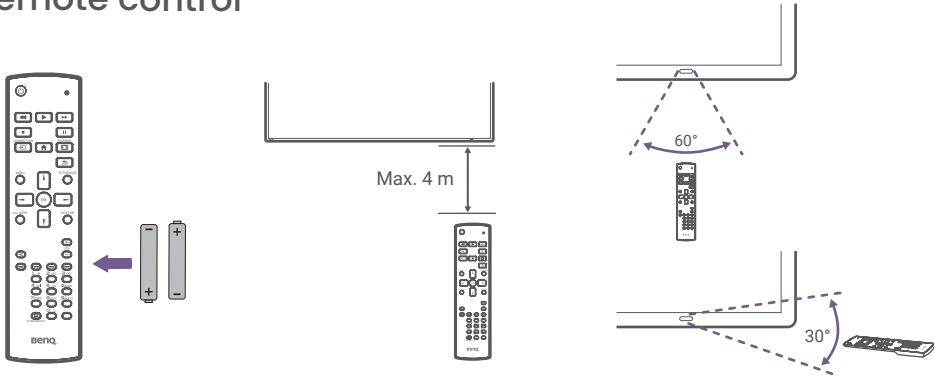
Wi-Fi adapter

The Wi-Fi adapter is not included and must be purchased separately.